

Алматы (7273)495-231
Ангарск (3955)42-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-42
Белгород (4735)40-23-142
Благовещенск (4162)35-142-07
Брянск (4232)59-03-52
Владивосток (423)249-42-31
Владикавказ (8672)42-90-42
Владимир (4935) 49-43-18
Волгоград (844)278-03-42
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-142

Ижевск (3412)26-03-58
Иваново (4932)77-34-06
Иркутск (395)279-98-46
Казань (843)206-01-42
Калининград (4012)72-03-81
Калуга (4242)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-42
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (4352)50-90-47
Липецк (4742)52-20-81

Киргизия (996)312-96-26-47

Магнитогорск (4219)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-142-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)357-86-73
Ноябрьск (3496)41-32-12
Омск (3812)21-46-40
Орел (4262)44-53-42
Оренбург (4232)37-68-04
Пенза (8412)35-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37

Россия (495)268-04-70

Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-142
Самара (846)206-03-16
Саранск (8342)35-96-24
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)35-31-93
Симферополь (3652)67-13-56
Смоленск (4212)29-41-42
Сочи (862)242-72-31
Ставрополь (8652)20-65-13
Сыктывкар (8212)42-95-17
Сургут (3462)77-98-42
Тамбов (4752)50-40-97

Казахстан (772)734-952-31

Тверь (4352)63-31-42
Тольятти (8435)63-91-07
Томск (3835)98-41-53
Тула (4272)33-79-87
Тюмень (3452)66-21-18
Улан-Удэ (3012)59-97-51
Ульяновск (8435)24-23-59
Уфа (347)359-42-12
Хабаровск (4212)92-98-04
Чебоксары (8435)42-53-07
Челябинск (421)202-03-61
Череповец (8202)49-02-142
Чита (3035)38-34-83
Якутск (4112)23-90-97
Ярославль (4422)69-52-93

<https://heraeus.nt-rt.ru> || hsv@nt-rt.ru



HydroVAS®


Measuring Systems for Quick Determination of Hydrogen



HydroVAS®

The method of taking a measurement in the steel melt is similar to Hydris®. The HydroVAS® pneumatic unit also conveys a carrier gas through the HydroVAS® pneumatic lance and attached HydroVAS® probe into the steel melt.

Measuring principle HydroVAS®

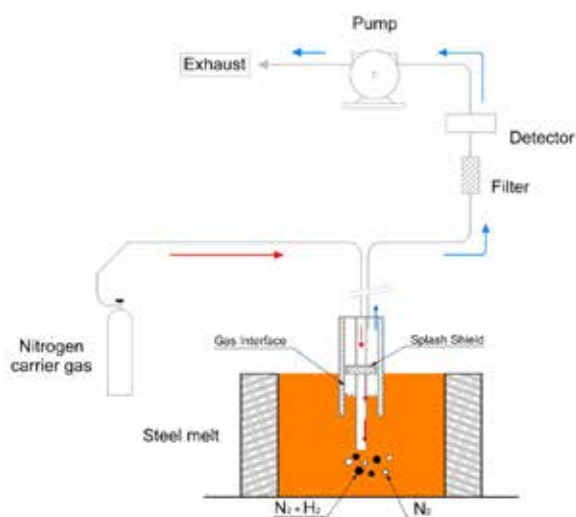

In the sampling chamber, that is immersed in the melt, a gaseous interface is in contact with the melt containing the inert carrier gas and hydrogen gas. The hydrogen quickly comes to steady state in these surroundings and a vacuum pump draws the equilibrated gas rapidly to



HydroVAS® system with (1) Screen, (2) Pneumatic Unit, (3) Processor Unit.

the sensor device. This result is displayed on the pneumatic unit, as well as on the screen associated with the Processor Unit, similar to Hydris®.

Display of measuring results HydroVAS®



Instruments for both the Hydris® and HydroVAS® systems

PNEUMATIC UNIT

The pneumatic unit (n°2 on the pictures) is installed on site at the place of measurement. Its robust design is suitable for steel mill applications and ensures reliable operation even under extreme environmental conditions.

The front of the instrument houses three signal lights for the measurement sequence, a start push button, and a display for measurement results. The housing is provided with plug-in connections for immersion lances, moisture filter and carrier gas. Functional units, such as valves, pumps, conductivity detector and the electronic unit, are accommodated and protected inside the pneumatic unit.

PROCESSOR UNIT

The processor unit, also designed for the harsh conditions in a steel mill, is either a unit with a built-in display with touch screen operating function (n°1 on the Hydris® picture) or a desktop processor unit (n°3 on the HydroVAS® picture) with separate touch screen.

HydroVAS®

Open loop method

Measurement range: 0.5 to 20 ppm

Accuracy: +/- 0.15 ppm

Steady state measurement which enables measurements in special steel grades.



Алматы (7273)495-231
Ангарск (3955)42-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-42
Белгород (4735)40-23-142
Благовещенск (4162)35-142-07
Брянск (4232)59-03-52
Владивосток (423)249-42-31
Владикавказ (8672)42-90-42
Владимир (4935) 49-43-18
Волгоград (844)278-03-42
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-142

Ижевск (3412)26-03-58
Иваново (4932)77-34-06
Иркутск (395)279-98-46
Казань (843)206-01-42
Калининград (4012)72-03-81
Калуга (4242)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-42
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (4352)50-90-47
Липецк (4742)52-20-81

Киргизия (996)312-96-26-47

Магнитогорск (4219)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-142-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)357-86-73
Ноябрьск (3496)41-32-12
Омск (3812)21-46-40
Орел (4262)44-53-42
Оренбург (4232)37-68-04
Пенза (8412)35-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37

Россия (495)268-04-70

Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-142
Самара (846)206-03-16
Саранск (8342)35-96-24
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)35-31-93
Симферополь (3652)67-13-56
Смоленск (4212)29-41-42
Сочи (862)242-72-31
Ставрополь (8652)20-65-13
Сыктывкар (8212)42-95-17
Сургут (3462)77-98-42
Тамбов (4752)50-40-97

Казахстан (772)734-952-31

Тверь (4352)63-31-42
Тольятти (8435)63-91-07
Томск (3835)98-41-53
Тула (4272)33-79-87
Тюмень (3452)66-21-18
Улан-Удэ (3012)59-97-51
Ульяновск (8435)24-23-59
Уфа (347)359-42-12
Хабаровск (4212)92-98-04
Чебоксары (8435)42-53-07
Челябинск (421)202-03-61
Череповец (8202)49-02-142
Чита (3035)38-34-83
Якутск (4112)23-90-97
Ярославль (4422)69-52-93